

Trex Transcend™ Care and Cleaning Guide

All exterior building materials require cleaning. Periodic cleaning of Trex Transcend™ decking and railing will maintain the beauty of the deck. Removing pollen and other debris from the deck surface, periodically, will help to reduce mold growth on the biofilm.

Solution	
General Dirt and Debris	The affected area should be sprayed off with a hose to remove surface debris. Use warm soapy water and a soft bristle brush to remove dirt and debris from the embossing pattern
Chalk Lines	High permanence chalk lines may discolor the surface. Use only Irwin Strait-line dust off marking chalk (purple) available at irwin.com
Tannins Due to Debris	Remove all debris from deck using a hose or broom. Once the deck surface is dry apply a “deck brightener” to the deck as directed by the manufacturer. Deck brighteners contain Oxalic acid which will remove tannins.
Ice & Snow	A plastic shovel may be used to remove snow from the deck. Use Calcium chloride or rock salt to melt the snow and ice from the deck surface.
Oil/Grease/Food	All food spills should be removed as soon as possible. The surface must be cleaned within seven days to maintain the stain warranty. To remove, spray off with a hose and use warm, soapy water and a soft bristle brush to remove spills from embossing pattern.
Mold and Mildew	If debris such as pollen and dirt is allowed to remain on the deck surface, mold can feed on the biofilm. Using a hose and warm soapy water with a soft bristle brush is recommended to remove the food source and mold.
Pressure Washer	A 1500psi power washer may be used on Transcend™ shell surface to remove dirt and debris. Use a fan tip at least 4” away from the shell when using a power washer.
Transcend™ Railing	Never use Acetone or other solvents on Trex Transcend™ railing to maintain the beauty of the surface.

Trex® Decking & Railing General Care and Cleaning Guide (Composite & PVC)

All exterior building materials require cleaning. Trex recommends basic cleaning with soap and hot water or a commercially available deck cleaner twice a year. This will help maintain the beauty of Trex decking, fencing, railing, and trim.

Solution	
Dirt and Debris	Clean deck to remove dirt and debris. Soap and hot water is all that is needed.
Chalk Markings	Most colored chalk lines are permanent. For Trex use either baby powder or Irwin Strait-line dust off marking chalk available at: http://www.irwin.com/irwin/consumer/jhtml/detail.jhtml?prodId=IrwinProd210003
Visible Printing	The printing on the side of Trex decking boards are required by building codes. With careful installation, most printings can be hidden. Visible printings can be lightened with acetone.
Water Spots, Leaf Staining & Wood Tannins	Tannin leaching occurs in Trex and all wood-based products naturally. Allow for at least 12 weeks of normal weathering. This process may be hastened through the use of a product containing oxalic or phosphoric acid, commonly known as Deck Brightener. *
Ice & Snow	Calcium chloride or rock salt, available in many home centers, will melt ice on Trex decking. Rinse off when first practical. Use caution when removing snow or ice with a snow shovel, and never use a metal snow shovel on a Trex deck. A shovel may scratch the deck, which is not covered under warranty.
Scuffs & Abrasions	Scuffs and abrasions can fade or disappear naturally after 12 - 16 weeks of weathering. This can be accelerated with a product containing oxalic or phosphoric acid, also known as Deck Brightener. *
Rust Stains, Ground-In Dirt & Grime & Pigment staining	Use a cleaning product containing oxalic or phosphoric acid base, also known as Deck Brightener to lighten or remove the rust or dirt. Product may need to sit on stain 10 - 15 minutes before rinsing. *
Oil & Grease Stains	Rinse the stain with hot water as soon as possible. Use Pour-N-Restore www.pour-n-restore.com as directed for any remaining stain (test in a small area first as this may remove some of the colorant from the decking surface).
Mold & Mildew	Semi-annual (spring and fall) cleaning of your deck is important to prevent the buildup of pollen and other debris that can support the growth of mold. Use conventional deck washes or cleaners that contain sodium hypochlorite (bleach) and detergent (refer to Mold Technical Bulletin on www.trex.com for specific recommendations). * Note: Trex Escapes can be effectively cleaned by using a hose and warm, soapy water with a soft bristle brush.
Pressure Washer	Trex Company does not recommend the use of a pressure washer. The use of a pressure washer with a greater than 1,500 PSI and/or applied closer than 12" from the deck surface could damage the decking surface and result in a loss of warranty coverage.
Sanding	Trex Company does not recommend sanding. Sanding will change the appearance of the surface of Trex® material and will void the warranty.
Disposal	Trex Decking and Railing products should be disposed with normal construction debris or household waste. Do not burn Trex products.

**Use of products containing bleach or acid will lighten the surface of Trex. Use in an inconspicuous area to determine if lightening is aesthetically pleasing to you. Neither product will affect the structural integrity of Trex.*

Note: Trex does not recommend the placement of rubber or vinyl materials such as those found in grill mats, rubber-backed welcome mats, vinyl or PVC potted containers, etc., on the surface of Trex Escapes® for extended periods of time. This is due to the presence of additives in the rubber and PVC products that have a tendency to migrate from these materials to Trex Escapes over time, resulting in discoloration of the surface.